

## Maintenance Service Intervals (See page 26 for information on how to follow this maintenance schedule.)

Maintenance Items	Kilometres x 1,000	1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100	
	Months	-	3	6	9	12	15	18	21	24	27	30	33	36	39	42	45	48	51	54	57	60	
<b>Engine</b>																							
□ Timing belt (UZJ100, HZJ# models) .....	Replace every 150,000 km or 90 months																						
□ Valve clearance (HZJ# models) <sup>1</sup> .....		-	-	-	-	-	-	-	-	I	-	-	-	-	-	-	-	-	I	-	-	-	-
□ Valve clearance (UZJ100, FZJ# models) <sup>2</sup> .....		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	I	-	-	-	-
□ Drive belts .....		-	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-
□ Engine oil <sup>3</sup> .....		-	(R)	R	(R)	R	(R)	R	(R)	R	(R)	R	(R)	R	(R)	R	(R)	R	(R)	R	(R)	R	(R)
□ Engine oil filter .....		-	(R)	R	(R)	R	(R)	R	(R)	R	(R)	R	(R)	R	(R)	R	(R)	R	(R)	R	(R)	R	(R)
□ Cooling and heater system hoses and connections .....		-	-	-	-	-	-	-	-	I	-	-	-	-	-	-	-	-	I	-	-	-	I
□ Engine coolant (See "Toyota's lubricants and coolant" page 22) .....		-	-	-	-	-	-	-	-	R	-	-	-	-	-	-	-	-	R	-	-	-	-
□ Exhaust pipes and mountings .....		-	-	-	-	I	-	-	-	I	-	-	-	I	-	-	-	-	I	-	-	-	I

<sup>1</sup> Inspect valve clearance using a thickness gauge and adjust if necessary.

<sup>2</sup> Inspect tappet noise and engine vibration at idle and adjust clearances if necessary.

<sup>3</sup> For HZJ# models, use engine oil grade API CF-4; API CF, CE or CD may also be used. For UZJ100, FZJ# models, use engine oil grade API SH or SJ. See "Toyota's lubricants and coolant" page 22 for more details.

I = inspect

R = replace

(R) = replace when driving under severe conditions

*continued next page*