

Toyota Maintenance Schedule

Maintenance Items	Kilometres x 1,000	1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100
	Months	-	3	6	9	12	15	18	21	24	27	30	33	36	39	42	45	48	51	54	57	60
Electrical system																						
☐ Spark plugs (FZJ# models)	-	-	-	-	-	-	-	-	-	R	-	-	-	-	-	-	-	R	-	-	-	-
☐ Spark plugs (UZJ100 models)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	R
☐ Battery	-	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-
Fuel system																						
☐ Single fuel filter type (HZJ# models)	-	-	(R)	-	R	-	(R)	-	R	-	(R)	-	R	-	(R)	-	R	-	(R)	-	R	-
☐ Double fuel filter type (HZJ# models) ⁴ :																						
- main filter	-	-	(R)	-	R	-	(R)	-	R	-	(R)	-	R	-	(R)	-	R	-	(R)	-	R	-
- pre filter	-	(R)	R	(R)	R	(R)	R	(R)	R	(R)	R	(R)	R	(R)	R	(R)	R	(R)	R	(R)	R	(R)
☐ Water sedimenter (HZJ# models)	-	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-
☐ Fuel filter (UZJ100, FZJ# models)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	R	-	-	-	-
☐ Air filter	-	(I)	I	(I)	I	(I)	I	(I)	I	(I)	I	(I)	I	(I)	I	(I)	I	(I)	I	(I)	I	(I)
☐ Idle speed (HZJ# models)	A	-	-	-	A	-	-	-	A	-	-	-	A	-	-	-	A	-	-	-	A	-
☐ Diesel smoke (HZJ# models)	-	-	-	-	-	-	-	-	-	I	-	-	-	-	-	-	-	I	-	-	-	-
☐ Fuel tank cap, fuel lines and connections	-	-	-	-	-	-	-	-	-	I	-	-	-	-	-	-	-	I	-	-	-	I
☐ Fuel vapour control valve (UZJ100, FZJ# models)	-	-	-	-	-	-	-	-	-	I	-	-	-	-	-	-	-	I	-	-	-	I
☐ Charcoal canister (UZJ100, FZJ# models) ..	-	-	-	-	-	-	-	-	-	I	-	-	-	-	-	-	-	I	-	-	-	-

⁴ If the fuel being used contains high levels of impurities, as could occur when refuelling from a drum, replace the main filter every 10,000 km or 6 months and the pre filter every 5,000 km or 3 months.

I = inspect A = adjust
R = replace (R) = replace when driving under severe conditions